


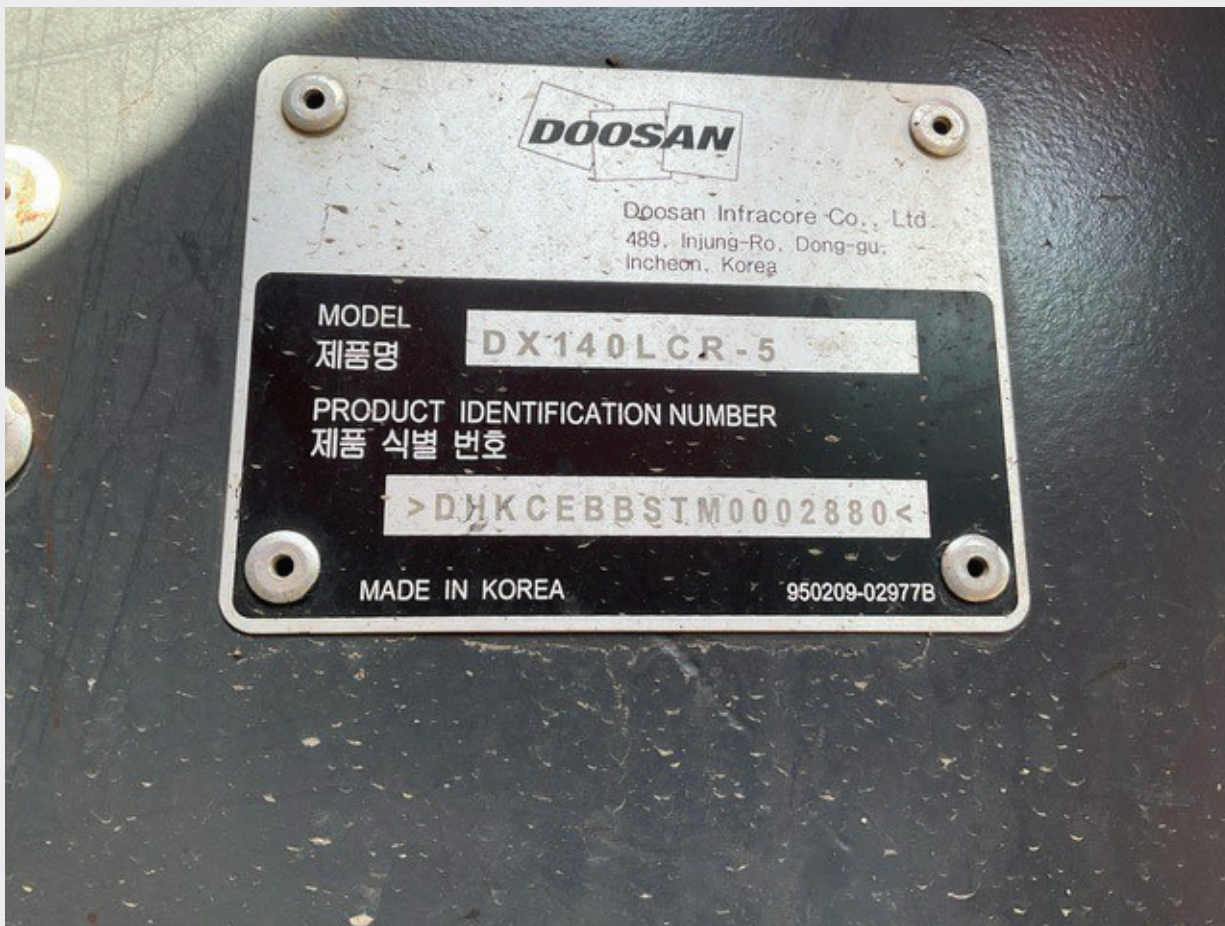













































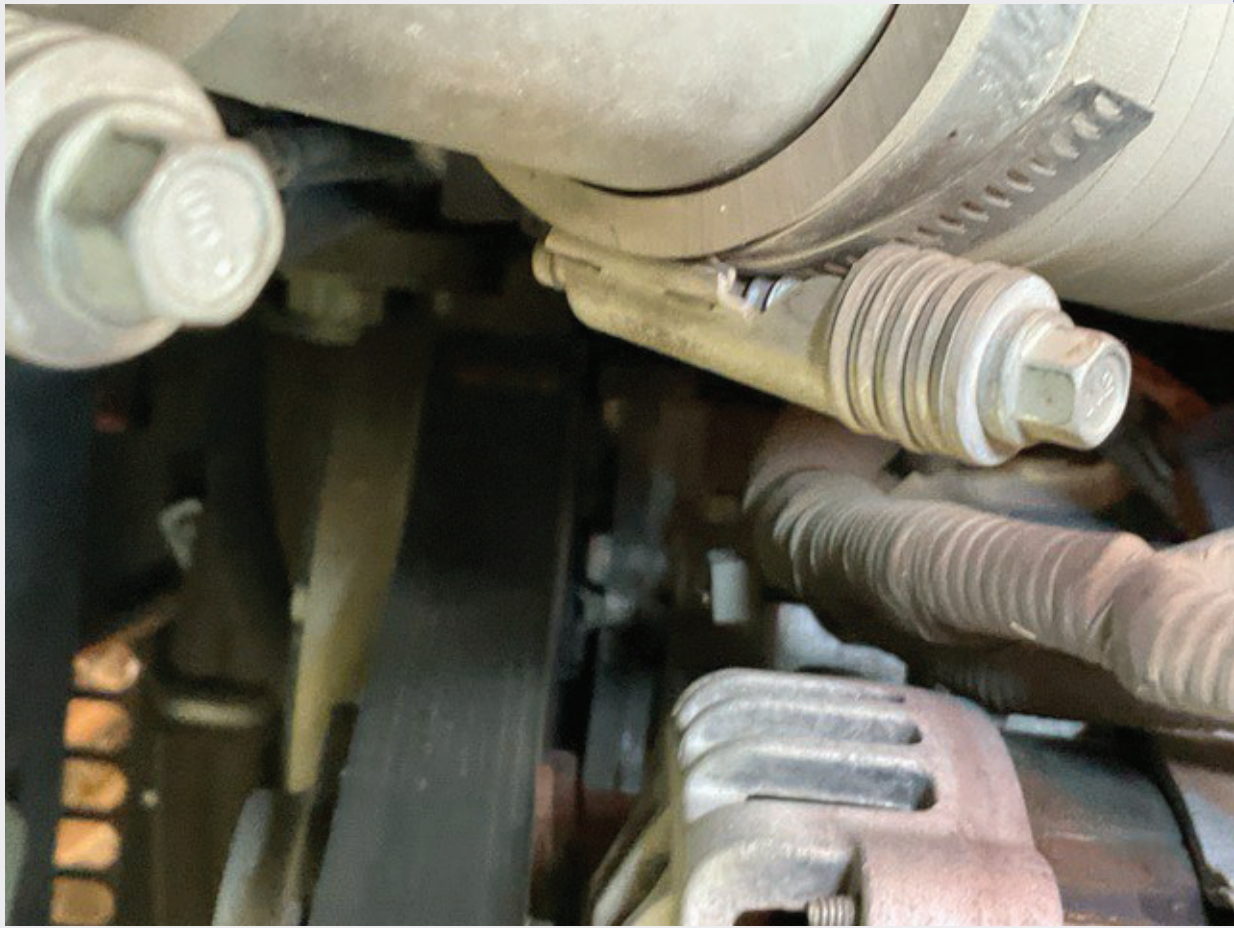







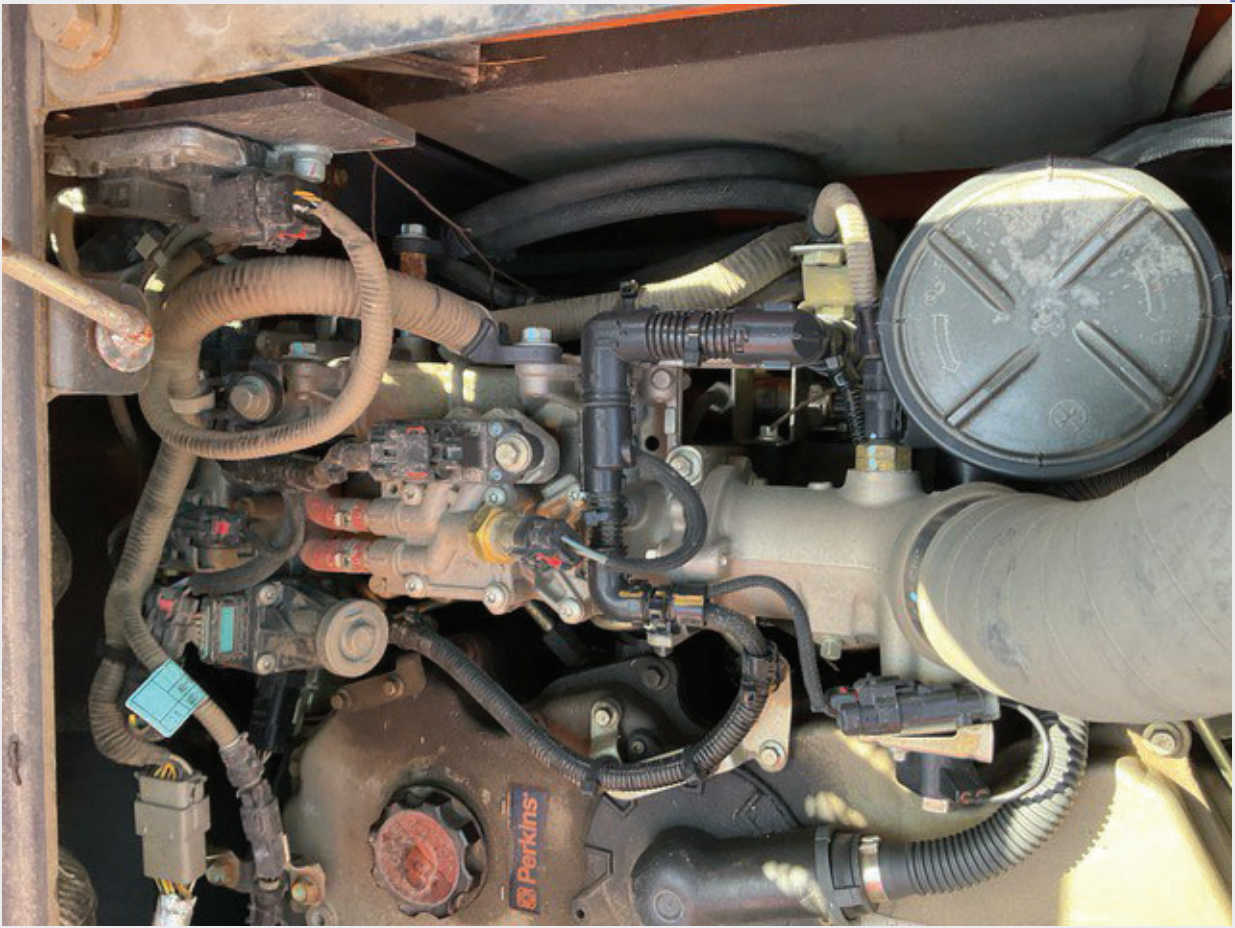



















ISO
BHL

Caution :
1. Stopper position is the midpoint of valve control.
2. Stopper position will different depending on the models.

A2
A1
C2
C1

95220-08861

WARNING

Foreign substances flowed into the reductive tank may damage after-treatment device and cause engine shutdown.

1. Fill DEF ONLY and DO NOT fill materials, which are not stipulated herein such as water, fuel, oil etc., and contaminated DEF.
2. Make sure to thoroughly clean the surroundings of the injection hole to prevent any dust, iron powder and water from flowing into the reductive tank.
3. During winter season, fill DEF up to only two-thirds of the tank capacity to prevent it from freezing.

10000-00000

DO NOT OVERFILL

DO NOT OVERFILL













































